


mount the top part of the canopy
on the ceiling.

Place the driver in the box, and pull the
coated steel cables through the holes in
bot sides.

Connect the power supply,
and close the box with the 4 black
screws.

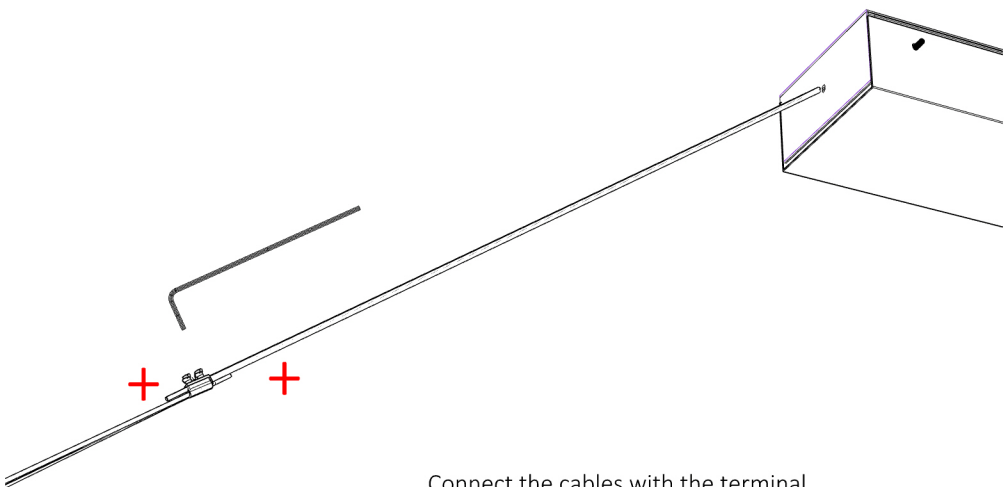

Connect the cables with the terminal block, red/red black/black, with the 1,5mm hexagonal hinge. If necessary adjust the length.

